

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

Mai 2004

01-044-0220-0 01-040-0239-0
01-040-0249-0

Anleitung

Bremshebelverbreiterung 1100/1150/1200GS


Lieferumfang:

- 1 x Bremshebelverbreiterung mit Unterteil
- 1 x Senkkopfschraube M5x12
- 1 x U-Scheibe M5
- 1 x Mutter selbstsichernd M5


Montage:

Legen Sie das Oberteil auf den Bremshebel wie im oberen Bild.

Unterteil von unten wie im unteren Bild in den Bremshebel einschieben und mit der Senkkopfschraube, U-Scheibe und Mutter verschrauben.

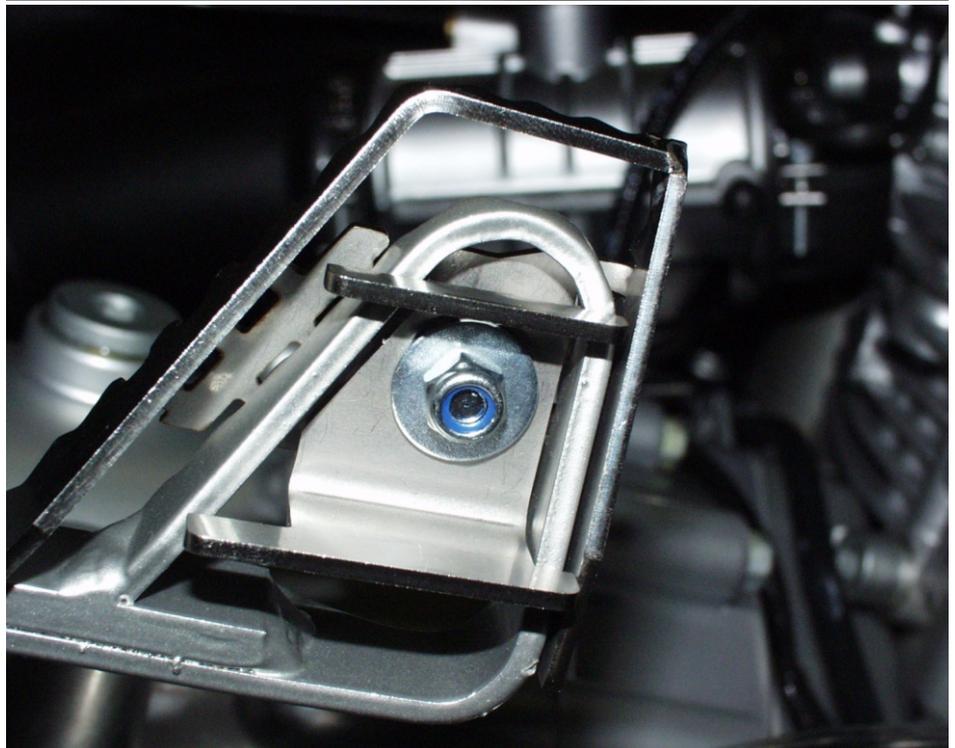

Sehen Sie auch in unserem Katalog oder im Internet unter WWW.TOURATECH.DE.

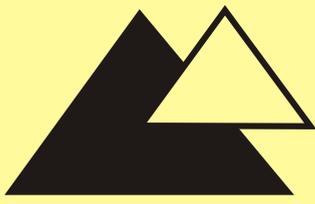

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

01-044-0220-0 01-040-0239-0
01-040-0249-0

Installation Instructions Brake Pedal Extension R11xxGS/1200GS

Contains:

- 1 x brake pedal extension top part
- 1 x brake pedal extension lower part
- 1 x M5x12 screw
- 1 x M5 washer
- 1 x M5 self securing nylock nut

Installation:

Lay the top piece on the brake pedal as shown on top photo. Now set the other piece under it as shown on photo and attach with the M5x12 bolt, M5 washer and M5 nylock nut. The two brake pedal extension plates "sandwich" the brake pedal.

